



# Škoda Fabia

## BRIEF INSTRUCTIONS


### Heating and ventilation

A - Temperature selection

B - Blower and shutting off air supply

C - Air distribution

D - Recirculated air mode

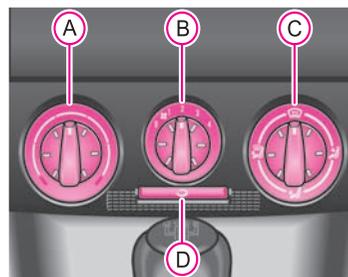

### Front seats



1 - To move seat forward and back

2 - Adjusting seat height\*


3 - Adjusting backrest angle

### Checking oil level


a - Oil **must not** be topped up

b - Oil **may** be topped up

c - Oil **must** be topped up

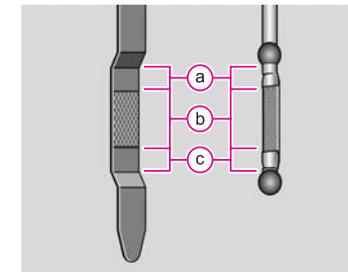


### Releasing fuel filler flap from driver's seat\*

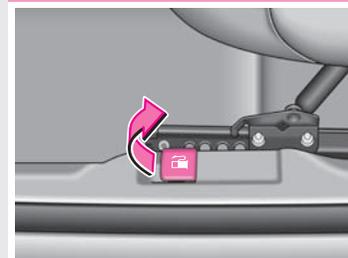

### Filling the tank



### Tailgate\*

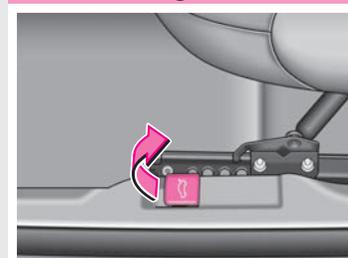

### Information display\*



Example of readout in large display\*

### Rear seats




Folding rear seat forward.

Pull up seat cushion and fold forward.

Pull release knob in rear seat backrest and fold seat forward.

Pull out the head restraints and fold the rear seat backrest fully forward.

### Gearshift (manual gearbox)

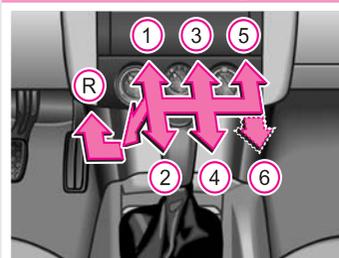


Shift pattern

### Bonnet



A

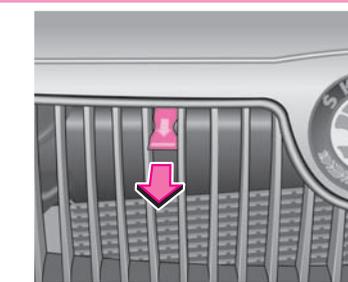


B

Warning!


For safety reasons, the bonnet must always be properly closed when vehicle is moving.

Always check therefore after closing the bonnet that the lock is engaged!

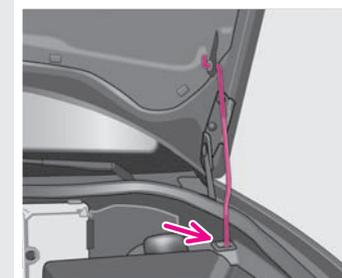

C

### Head restraints

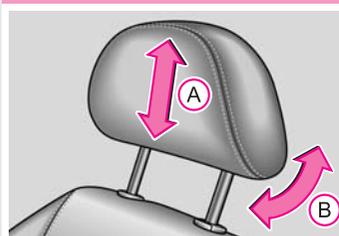


A - Adjusting height  
B - Adjusting angle

### Keys



The car is supplied with two keys which fit all the locks.

### Power sliding/tilting roof\*

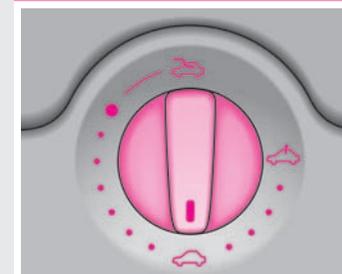

The sliding/tilting roof is opened and closed by means of a switch when the ignition is on.

Škoda Auto is constantly working on the further development of all types and models. Please understand that, for this reason, changes to the scope of supply in terms of shape, equipment and engineering may be introduced at any time. It is therefore not possible to derive any claims from the information, illustrations and descriptions contained in this Owner's Manual.

Reprinting, reproduction, translation or any other use of this document, in whole or in parts, is not permitted without the written consent of Škoda Auto.

Škoda Auto expressly reserves all rights in respect of copyright.

Subject to modification.

Published by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2005

Zkrácený návod

S54.5611.08.20

Fabia anglicky 06.05

6Y0 012 040 CA




You have opted for a Škoda - our sincere thanks for your confidence in us.

These brief instructions are intended to enable you to quickly familiarise yourself with the individual controls. The brief instructions are not a substitute for the **Fabia** Owner's Manual

Equipment marked with \* are fitted as standard only to certain model versions or are available only for certain models as optional equipment.

We wish you pleasant motoring at all times.

ŠkodaAuto

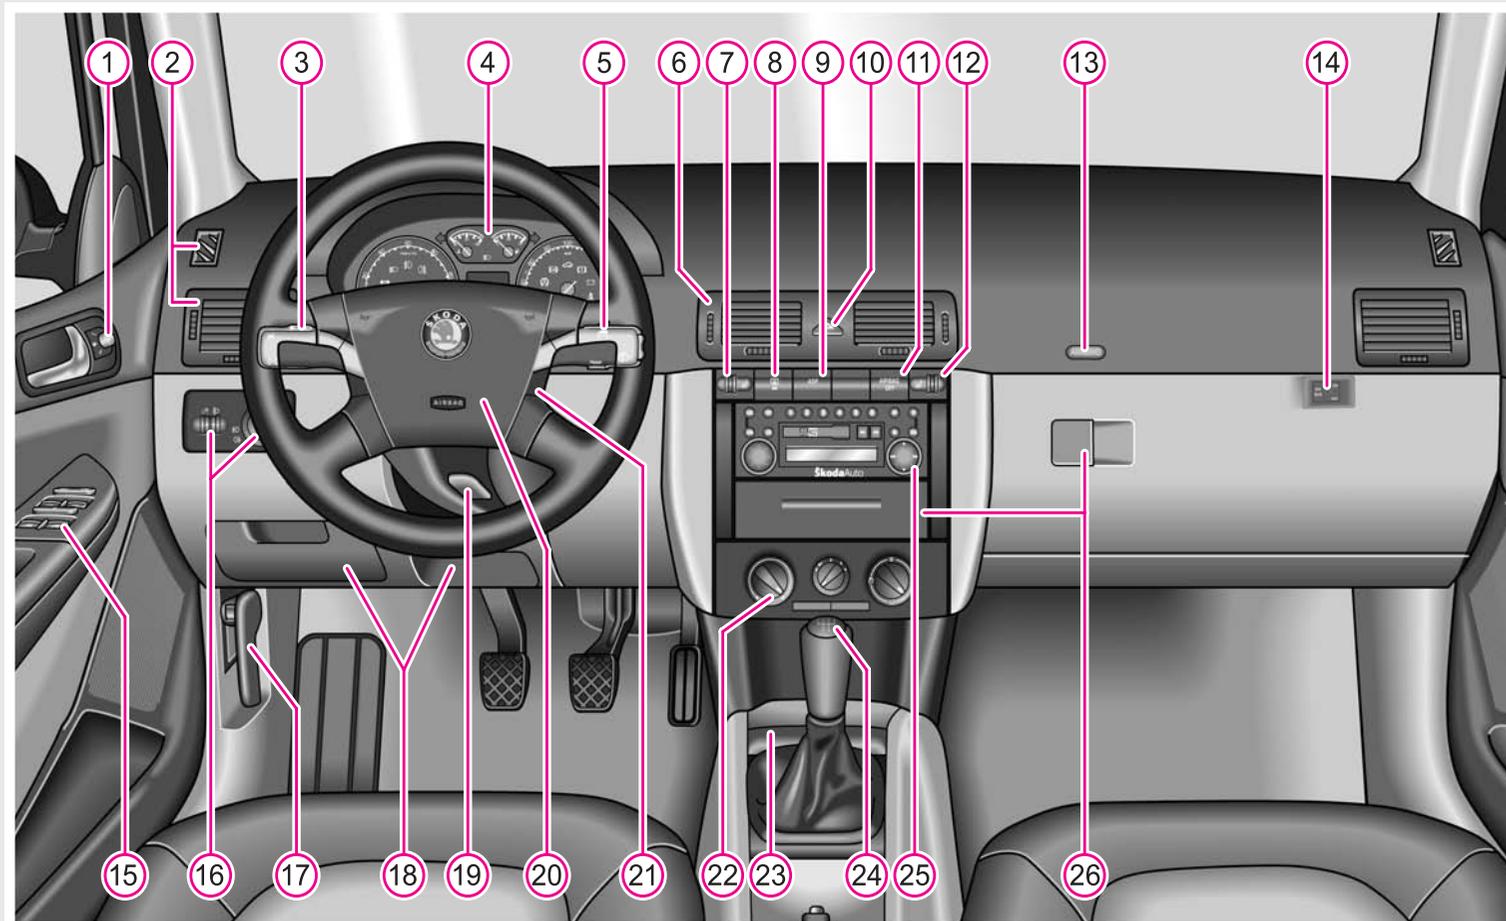

**8** Switch for rear window heater

**9** Switch for the ESP\*  
Switch for the TCS\*

**10** Switch for hazard warning lights

**11** Switched off front seat passenger airbag\*

**13** Front passenger airbag\*

**14** Switch for front passenger airbag(s)\*


**15** Central locking system\*  
Power windows\*

**16** Light switch

**17** Bonnet release lever


**18** Storage compartments

**19** Lever for adjusting the steering wheel\*

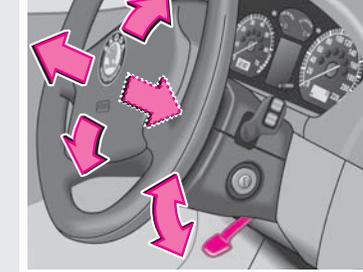

**20** Headlight flasher, driver airbag

**21** Ignition lock

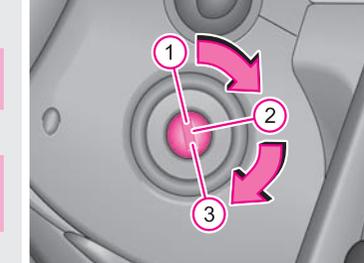

**Petrol engines**  
1 - Ignition off, engine off  
2 - Ignition on  
3 - Starting engine

**Diesel engines**  
1 - Fuel supply cut off, engine off  
2 - Glow and drive positions  
3 - Starting engine

**22** Heating and air conditioning system\*


**23** Ashtray

**24** Gearshift

**25** Radio\*

**26** Storage compartments

**1** Electrically adjustable exterior mirrors\*

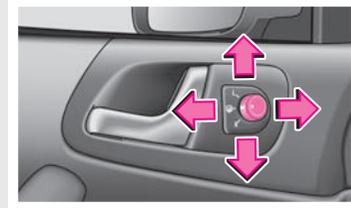


Position **L** - left-hand mirror

Position **☀** - heating exterior mirror (applies only to models with power windows)

Position **R** - right-hand mirror

**2,6** Air outlet vents


**3** Multi-functional switch

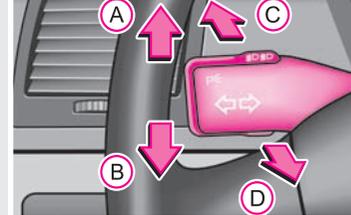

**A** - Right turn signals  
**B** - Left turn signals  
**C** - High and low beam  
**D** - Headlight flasher

**4** Instrument cluster:  
Instruments and indicator lights


- Turn signals
- Failure of bulb\*
- Main beam
- Rear fog light
- Low beam
- Fog lights\*
- Dynamo
- Open door\*
- Airbag system

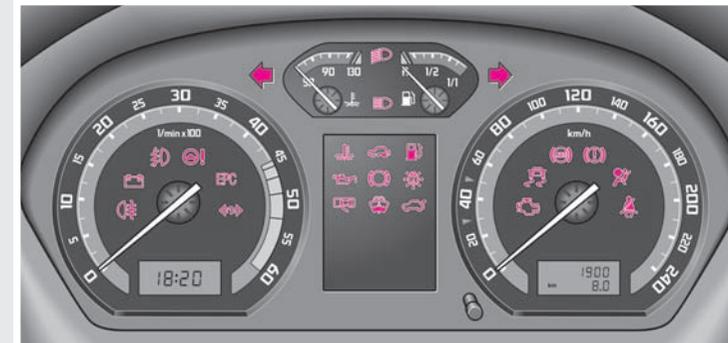

- Power steering\*
- Glow plug system (diesel engine)
- EPC fault light (petrol engine)
- Brake system
- Trailer turn signal system\*
- EPC
- Coolant temperature/ Coolant level
- Electronic immobiliser

- Washer fluid level\*
- Boot lid\*
- Control system for exhaust
- Traction control system (TCS)\*/  
Electronic stability programme (ASR)\*
- Antilock brake system (ABS)\*
- Fuel reserve
- Engine oil pressure
- Brake pad worn\*
- Seat belt warning light\*

**5** Lever for windscreen wiper/washer with switch for multi-functional display\*

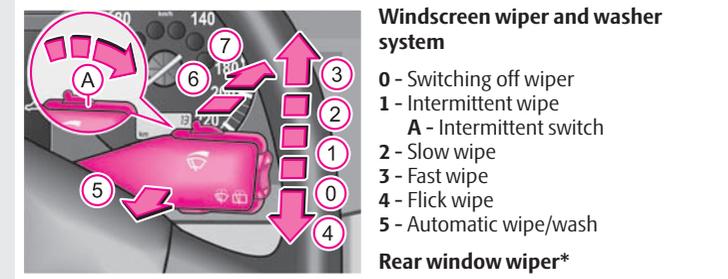

**Windscreen wiper and washer system**  
0 - Switching off wiper  
1 - Intermittent wipe  
A - Intermittent switch  
2 - Slow wipe  
3 - Fast wipe  
4 - Flick wipe  
5 - Automatic wipe/wash

**Rear window wiper\***  
6 - The rear window wiper operates every 6 seconds  
7 - Automatic wipe/wash

**7,12** Switch for seat heater\*